


ROAD SPECIFICATIONS

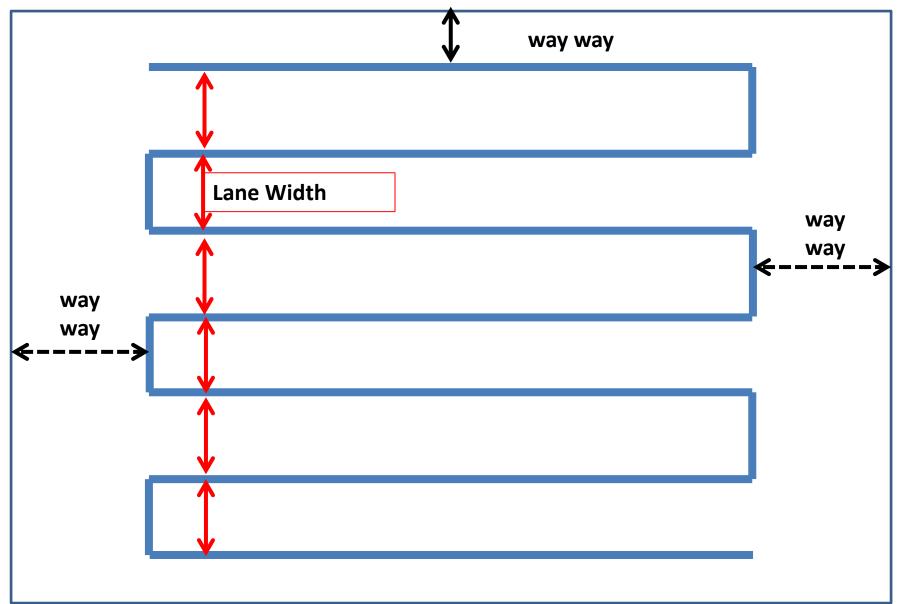

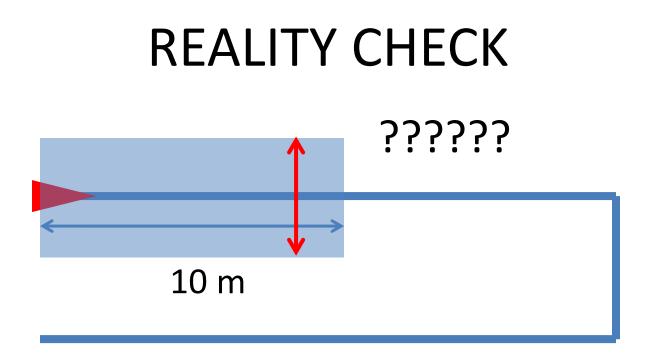


FOR THE AIRLINES ABOUT 10 M, DETERMINATE THE AIRLINES . MEASURE HOW MUCH THE REAL LAND WIDTH LOOKS LIKE. KEEP ORIGINAL HIGHLIGHTS AND IMPORT ACTUAL LANDWIDE.

ERROR CASES

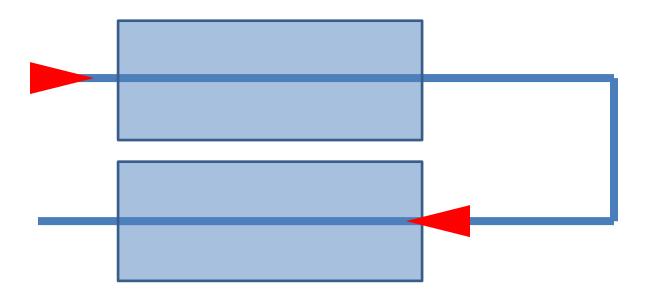

SMALLER ACTUAL LANDWIDE TO SET LANWIDELEARNING VARIETIES OR NO VARIETIES

ERROR CASES

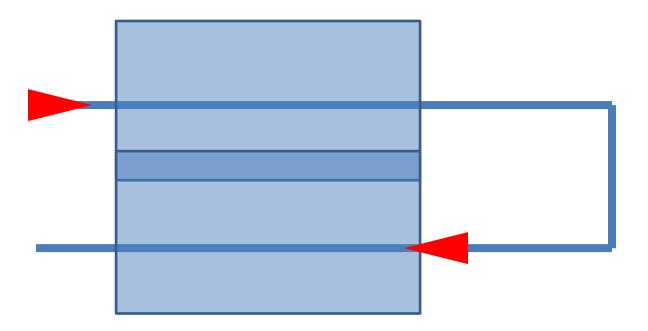

ACTUAL LANDWIDE IS BIGGER than SET-UP LANWIDE LETS TO SUPPLY, ONLY THICK